

THANK YOU!

For purchasing a Morley® pedal. You now own the best Wah pedal made!

Please take a few minutes to familiarize yourself with the features of your new pedal. With common sense handling, it should last for years. We know you will appreciate the rugged construction of your Morley®. Most of all, we hope you enjoy using it as much as we enjoyed building it.

OPERATION

The Wah Mode is activated by pushing the Wah switch (a red LED, located above the WAH switch, will light when it's "on"). With this new series, we've maintained the full, thick sound and wide bandwidth of previous Morley WAH pedals and added more reactive sound. Now you can make your guitar talk and sing similar to the sounds of Hendrix, Clapton and other greats of the 60's and early 70's. See WAH level for suggested settings or experiment to create your own sound.

CONNECTIONS

9V: Use Morley's 9 VDC 300 milliamp regulated adapter only.

IN: Input jack. Plug instrument into this jack using 1/4" guitar cable.

OUT: Connect amplifier to this jack using a 1/4" guitar cable.

NOTE: You'll find cords fit very tightly into our input and output jacks. The tight fit helps prevent the cord from becoming accidentally unplugged from the pedal. Make sure the cords are completely plugged in for best results.

AC ADAPTER

Use Morley's 9VDC 300 milliamp regulated adapter only. Using a non-regulated adapter could cause a low frequency hum in your amplifier and may damage the pedal.

BATTERY

The PWA is designed to use one 9 volt battery when not using an adapter. We suggest you use a good quality alkaline battery.

To prolong battery life, unplug your cord completely from the input jack when not using the pedal. When the pedal is not used for extended periods, we recommend you remove the battery from the pedal or replace it every six months to prevent leakage problems.

BATTERY REPLACEMENT

When the battery becomes weak, the overall wah will become weak and your signal may become slightly distorted.

Remove the battery door located on the bottom of the pedal (a short cord is attached to the door to help prevent loss). Once the door is off, the old battery can be removed from the battery snap and a new battery plugged in. Make sure the polarity (+/-) is correct before inserting the new battery.

When you replace the battery door, you will notice it fits very tightly against the battery. This prevents the battery from rattling inside the pedal.

WARRANTY

All Morley® pedals are warranted for two years from date of purchase. To obtain warranty service contact the store where purchased, or call 1-800-284-5172.

SPECIFICATIONS

POWER: 9 Volt Battery or 9VDC 300 milliamp regulated adapter (center pin is negative)


CURRENT DRAW: 5 mA @ 9 VDC

WEIGHT: 2.9 lb./ 1.32 kg

INDICATOR: Wah mode LED on

Bypass mode LED off

Here is a general recommendation for hooking up a WAH with other effects:

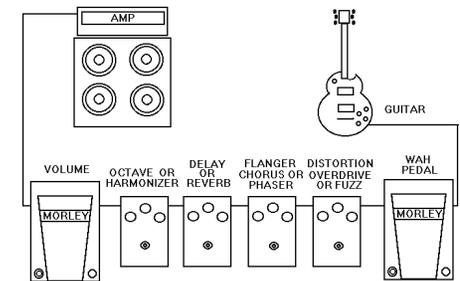

- **NOTE:** This pedal is not intended for use through an effects loop (send and return).

FEATURES

- **WAH Level Control:** This knob controls the overall output level of the WAH effect. It does not change the wah sweep or range.
- **WAH On/Off Switch:** This switch turns the WAH effect “on” or “off”.
- **Electro-Optical:** The amount of light from the LED (Light Emitting Diode) that shines on the LDR (Light Dependent Resistor) is controlled by a shutter placed between the two devices. Our unique electro-optical design ensures smooth overall control of the WAH without unwanted noise typical with potentiometer (pot) controlled pedals.
- **LED WAH On/Off Indicator:** A red LED located above the WAH switch serves as on/off indicator. When the LED is on, WAH is engaged. When the LED is off, the pedal is in bypass mode.

MORLEY

185 Detroit Street, Cary, IL 60013
Phone: (847) 639-4646
Fax: (847) 639-4723
www.morleypedals.com

MORLEY®



Pro Series WAH

Model PWA

OWNER'S MANUAL